ENGLISH

SIDE BY SIDE REFRIGERATOR

OWNER'S MANUAL AND INSTALLATION

CONTENTS

SAFETY WARNING 2

OPERATING INSTRUCTIONS

SETTING UP THE REFRIGERATOR 4
MAJOR FEATURES 4
CONTROL PANEL 5
DIGITAL PANEL 7
TEMPERATURE CONTROL 8
ICE AND COLD WATER DISPENSER 8
SHELVES AND BINS 9
FOOD STORAGE GUIDE 10
CoolSelect Zone™Drawer GUIDE 12
REMOVING FREEZER ACCESSORIES 14
REMOVING REFRIGERATOR ACCESSORIES 14
BEVERAGE STATION™(optional) 15
CLEANING ACCESSORIES 15
CHANGING THE INTERIOR LIGHT 16
WATER FILTER 17
DOORS 17

INSTALLATION INSTRUCTIONS

INSTALLATION OF THE REFRIGERATOR 18
REMOVING THE FRONT LEG COVER 19
REMOVING THE REFRIGERATOR DOORS 20
REATTACHING THE REFRIGERATOR DOORS 22
ADJUSTING THE CLEARANCE BETWEEN THE DOORS 25
CHECKING THE WATER DISPENSER LINE 27
INSTALLAING THE WATER DISPENSER LINE 28
TROUBLESHOOTING 31

Register your product at www.samsung.com/global/register

DA99-01023G REV(0.0)

SAFETY WARNINGS

WARNING

- Before operating the appliance, please read this manual thoroughly and retain it for your reference.
- Because these following operating instructions cover various models, the characteris tics of your refrigerator may differ slightly from those described in this manual
- The appliance is not intended for use by children or infirm persons without adult supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- R600a or R134a is used as a refrigerant. Check the compressor label on the rear of the appli ance and the rating label inside the fridge to see which refrigerant is used for your refrigerator.
- The refrigerator only use ice makers which made by samsung Electronics for the refrigerator.
- The incorporated ice-makers are to be installed only by the manufacture or its service agent.

CAUTION/WARNING SYMBOLS USED

WARNING	Indicates that a danger of death or serious injury exists.
CAUTION	Indicates that a risk of personal injury or material damage exists.

OTHER SYMBOLS USED

	Represents something you must NOT
	Represents something you must NOTdisassemble.
	Represents something you must NOT touch.
	Represents something you must follow.
	Indicates that you must disconnect the power plug from the socket.
	Represents a ground is needed to prevent electric shock.
	It is recommended that this symbol be handled by service man.

WARNINGS

Do not plug several appliances into the same multiple power board.
- This could cause overheating and the risk of fire.

Make sure that the power plug is not squashed or damaged by the back of the refrigerator .
- A damaged power plug may overheat and cause fire.

Do not directly spray water inside or outside the refrigerator.
- There is a risk of fire or electric shock.

Do not spray inflamable gas near the refrigerator.
- There is a risk of explosion or fire.

Do not insert the power plug with wet hands.
- You may receive an electric shock.

Do not put a container filled with water on the refrigerator.
- If spilled, there is a risk of fire or electric shock.

Do not install the refrigerator in a damp place or a place where it may come in contact with water.
- Deteriorated insulation of electrical parts may cause an electric shock or fire.

Do not store volatile or flammable substances in the refrigerator.
- The storage of benzene, thinner, alcohol, ether, LP gas and other such products may cause explosions.
- This product is intended only for the storage of food in a domestic environment

Do not disassemble or repair the refrigerator by yourself.
- You run the risk of causing a fire, malfunctions and/or personal injury.

Pull the power plug out of the socket before changing the interior light of the refrigerator.
- Otherwise, there is a risk of electric shock.

If you wish to dispose of the refrigerator / freezer throw it away after first removing the doors and seals.
- Do so in a way, that is not possible for a child to remain trapped inside.
- Dispose of the packing material for this product in a enviro nmentally friendly manner.
- When disposing of this product or a previous product, please comply with the requirements of your local authority.

The refrigerator must be grounded.
- You must ground the refrigerator to prevent any power leak ages or electric shocks caused by current leakage from the refrigerator.

Never use gas pipes, telephone lines or other potential lightening rods as ground.
- Improper use of the ground plug can result in electric shock.

WARNING

- Keep ventilation openings in the appliance enclosure or mounting structure clear of obstruction.
- Do not use mechanical devices or any other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the refrigerator/freezer, unless they are of a type recommended by the manufacturer.

SAFETY WARNINGS

CAUTIONS

Do not overfill the refrigerator with food.
- When you open the door, an item may fall out and cause personal injury or material damage.

Do not put bottles or glass containers in the freezer.
- When the contents freeze, the glass may break and cause personal injury.

If the wall socket is loose, do not insert the power plug.
- There is a risk of electric shock or fire.

Do not disconnect the power cord by pulling on it. Do not bend the power cord excessively or place heavy articles on it .
- This constitutes a fire hazard.
- Damage to the cord may cause a short-circuit, fire and/or electric shock.
- If the power cord or the plug is damaged, it must be replaced by th e manufacturer, a certified service agent or qualified service personnel.

Do not store articles on the top of the appliance .
- When you open or close the door, the articles may fall and cause personal injury and/or material damage.

Do not store pharmaceuticals products, scientific materials or temperature-sensitive products in the refrigerator.
- Products that require strict temperature controls must not be stored in the refrigerator.

The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.
Do not let children hang on the door/s as serious injury may result.

If you smell pharmaceutical or smoke, pull out the power plug immediately and contact your SAMSUNG Electronics service center.

Do not touch the inside walls of the freezer or products stored in the freezer with wet hands.
- This may cause frostbite.

Do not insert your hands into the bottom area under the appliance.
- Any sharp edges may cause personal injury.

Never put fingers or other objects into the dispenser hole and ice chute. It may cause personal injury or material damage

Either R600a or R134a are the refrigerants used.
Check the compressor label on the rear of the appliance and the rating label inside the fridge to see which refrigerant is used for your refrigerator.

CAUTIONS

The refrigerant used in the refrigerator/freezer and the gases in the insulation material require special disposal procedures. Ensure that none of the pipes on the back of the appliance are damaged prior to disposal.

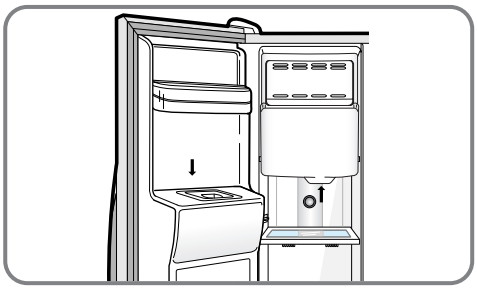

Do not use a wet or damp cloth when cleaning the plug. Remove any foreign matter or dust from the power plug pins.
- Otherwise there is a risk of fire.
- If the refrigerator is disconnected from the power supply, you should wait for at least five minutes before plugging it back.

If the refrigerator is not to be used for a long period of time, pull out the power plug.
- Deterioration in the insulation may cause fire.

Do not place the equipment directly under the sunlight.

The appliance must be positioned so that the plug is accessible after installation

If the power cord is damaged it must be replaced by manufacturer, a certified service agent or qualified service personnel.

If this appliance contains isobutane refrigerant (R600a)then the following warnings are applicable. R600a is a natural gas with high environmental compatibility however, it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.

Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.
- In order to avoid the creation of a flammable gas-air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used.
  The room must be $1m^3$ in size for every 8 g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance.
- Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.

SETTING UP THE REFRIGERATOR

Once you have performed the following steps, your refrigerator should be fully operational. If not, check the power supply and electricity source. If you have any questions, contact your SAMSUNG service center.

1 Place the refigerator in an appropriate location with reasonable clearance between the wall and the refigerator.
(refer to installation instructions in this mannal)

2 When the refrigerator is plugged in, the interior light should come on when you open the doors.

3 Set the temperature control to the coldest temperature and wait for an hour. The freezer should get slightly chilled and the motor should run smoothly.

4 Once the refrigerator temperature is sufficiently low, you can store food in the refrigerator. After starting the refrigerator, it takes a few hours to reach the appropriate temperature.

MAJOR FEATURES

Twin Cooling System
- The refrigerator and the freezer have two evapora tors. Given this independent system, the freezer and the refrigerator are cooled individually as required and are, therefore, more efficient. Food odor from the refrigerator does not affect food in the freezer due to separate of air flow circulation.

Multi-Flow System
- Cool air circulates through multiple vents on every shelf level. This provides even distribution of cooling inside cabinets to keep your food fresh longer.

Door Alarm
- A beeper reminds you if the door is left open.

High humidity for fresher food
- You can keep food, fruit and vegetables fresh for longer because your refrigerator supplies highly humidified cold air. This can be up to four or five times more effective than a normal refrigerator.

Energy-saving fridge/freezer
- Power consumption is kept to a minimum by distrib-uting cool air separately to the refrigerator and freezer.

Faster cooling times
- The power freeze function allow you to freeze food more quickly.

Abundant supply of ice and cold water
- The ice and water dispenser provides ice and cold water at any time.

Beverage Station (optional)
- You do not have to open the main door to access frequently used food in the extra refrigerating compartment. This saves time and money.

Deodorizer (optional)
- Reusable deodorizer keeps the refrigerator air fresh and odor free.

CoolSelect Zone™Drawer (optional)
- User can select Quick Cool, Thaw and Select buttons for quickly chill, thaw and cools items. Select Soft Freeze, Cool or Chill to control the tempera ture of drawer.

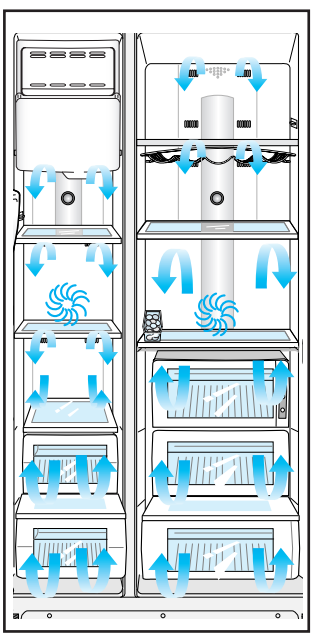

NOTE

This operation instruction covers various models.

The characteristics of your appliance may differ slightly from those described in this manual.

CONTROL PANEL

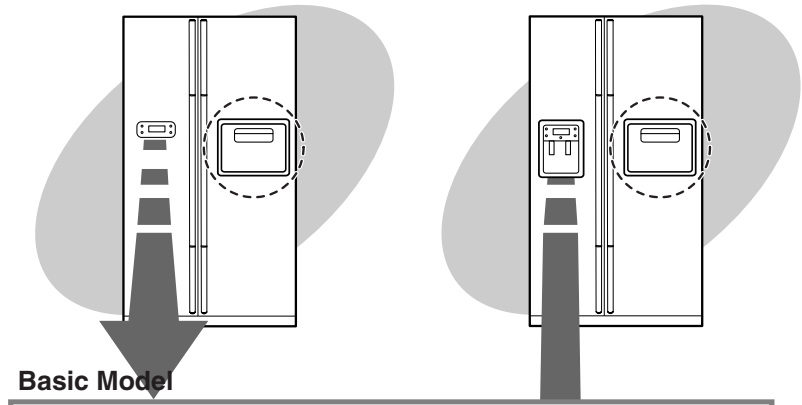

Basic Model

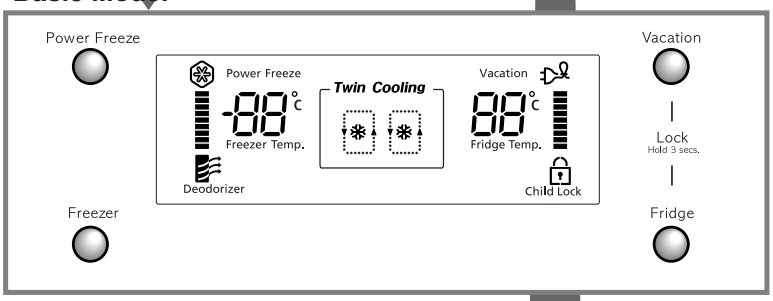

Dispenser Model

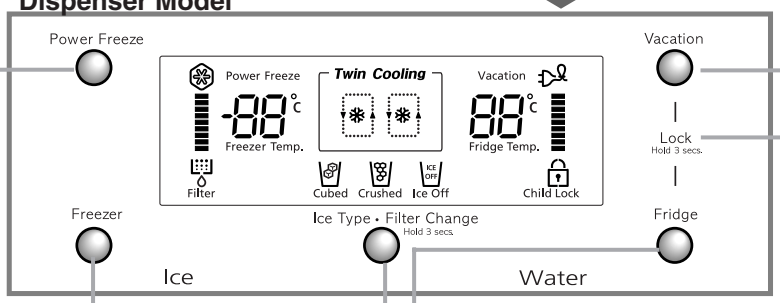

FREEZER TEMP. BUTTON
To set the freezer temperature, press the button repeatedly to change the set temperature in sequence between -14°C and -25°C

POWER FREEZE BUTTON
Speeds up the freezing process in the freeze.

ICE TYPE BUTTON
Use this button to choose Cubed or Crushed Ice or Ice off.

FILTER CHANGE BUTTON
In order to change filter, press this button for 3 sec . When the filter indicator icon is on, change the filter. When the water filter is replaced, reset the indicator by pressing the Ice Type button for 3 seconds.

VACATION BUTTON
This button turns the refrigerator compartment off, and the freezer compartment runs only.

FRIDGE BUTTON
To set the fridge temperature, press the button repeatedly to change the set temperature in sequence between 7°C and 1°C

CHILD LOCK BUTTON
When the "Vacation" and the "Fridge" buttons are pressed for more than 3 seconds simultaneously, Power Freeze, Vacation, Freezer Temp. and Fridge Temp. buttons will be locked and they do not work. But, the "Ice Type" button works normally, The Water and the Ice dispensers will not be locked and can still be used. To cancel this function, press the "vacation" and the "Fridge" buttons for 3 seconds. Also, this button has another function. When this button is pressed for 3 seconds, the heater for sweat control is off at a same time. If sweat is appeared around the cover dispenser or beverage station with this function, press this button for 3 seconds again. then, the sweat control function will be performed. and all keys will be unlocked at a same time.

CONTROL PANEL

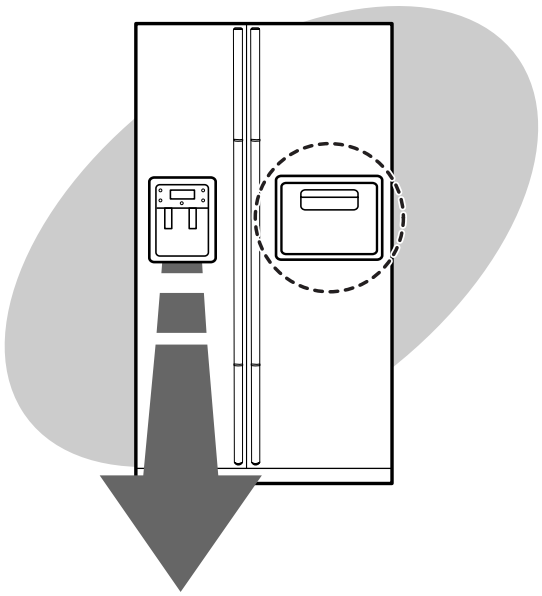

Dispenser Model (With CoolSelect Zone)

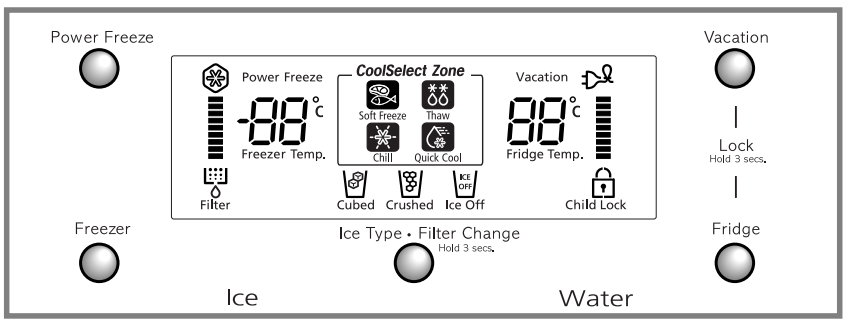

DIGITAL PANEL

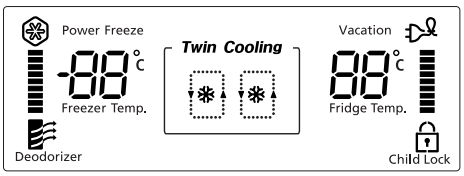

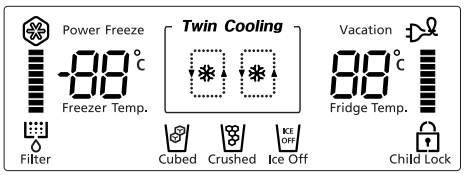

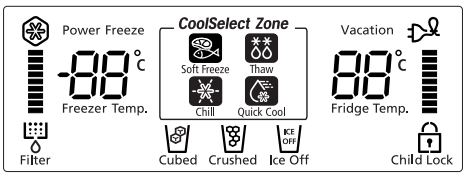

Freezer Temp. indicates the current freezer temperature.
Fridge Temp. indicates the current refrigerator temperature.
Quick Cool, Thaw, and Select show the status of the CoolSelect Zone™Drawer

• The LCD Back Light operates as follows.
1)Bright Light-Up conditions (Under the following conditions, the LCD Back Light glows brightly for 30 seconds)
-When the refrigerator is plugged in
-When a function button is pressed
-When a door (Refrigerator Door, Freezer Door) is opened
2)Dim Light-Up conditions (For power saving, the LCD Back Light glows dimly automatically)
-In 30 seconds after the power on
-In 30 seconds after the door is closed
-When there is no button press for 30 seconds after the last button input
Note) Black lines could appear on the LCD panel for a moment. It is due to static electricity that is a general phenomenon of LCD. It disappears automatically in a while. (It occurs when wiping the display panel with a dry cloth or controlling the buttons in dry surrounding conditions.)

Power Freeze

- This light goes on when you press the Power Freeze button. Press this button to return the freezer to its set temperature.
- If you need much ice, you can get ice faster.
- Press the button again to cancel the Power Freeze mode. If you use this function, energy consumption will increase. Please turn off when not using this function.

Vacation

- When the vacation light is on, refrigerator compartment is not operating but freezer compartment is operating. press the button once again to cancel “Vacation”. Be Sure to remove foods in the refrigerator compartment after “Vacation”setting.

Deodorizer

Deodorizer

- This light indicates the recyclable deodorizer is in operation.
- Recycle the honeycomb cartridge once or twice a year (see “Cleaning the Accessories” section page 16.)

Cubed Ice, Crushed Ice and Ice Off

Cubed Crushed Ice Off

- Press the Ice Type button in seqence to choose Cubed Ice, Crushed Ice or Ice Off to stop making ice.
- Light icon indicates the ice type currently chosen.

Filter Indicator

Filter

- When the filter indicator icon is on, change the filter.
- When the water filter is replaced, reset the indicator by pressing the Ice Type button for 3 seconds.

TEMPERATURE CONTROL

Freezer

- The freezer temperature can be set between -14°C and -25°C.
- Press the Freezer Temp. button repeatedly until the desired set temperature is shown in the temperature display.
- The temperature display changes in sequence between -14°C and -25°C. When the display reaches -14°C, it returns to -25°C.
- After five seconds, the display reverts to the actual freezer temperature. The unit will then work to adjust to the new desired temperature.

Refrigerator

- The refrigerator temperature can be set between 7°C and 1°C.
- Press the Fridge Temp. button repeatedly until the desired temperature is shown in the temperature display.
- The temperature display changes in sequence and reverts in the same way as the freezer.

WARNING

- When ice cream is stored above -15°C in freezer, it may melt.
- The temperature of the freezer or the refrigerator rises from frequent openings, when sweeping and from warm food. This may cause the digital display to blink . The digital display will stop blinking when the freezer and refrigerator return to the normal temperature.

ICE and COLD WATER DISPENSER

Ice Maker (Basic Model)

- Pull out the ice tray.
- Add water until it reaches the water level indicator.
- Put the ice tray back in place.

Ice Dispenser

The ice maker produces 10 cubes at once and about 120 cubes a day automatically. This quantity may be influenced by factors such as the freezer temperature, the Power Freeze function and the number of door openings. When your refrigerator is plugged in, the Cubed Ice mode is automatically selected .

Press the Ice Type button to select the type of ice:

- Cubed Ice
- Crushed Ice
- No Ice ➡ **No Ice**

NOTE

If the Ice remains in the Ice bucket, the cubed ice is obtained.

Push the ice dispenser lever with a cup.

- Place a cup to line of the dispenser lever to prevent the ice from jumping out.

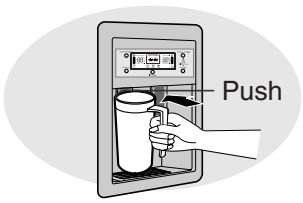

Water Dispenser

The capacity of the water tank is approximately 1.2 litres.

Cold Water

- Push the water dispenser lever with a cup.
- If you have just installed the refrigerator, throw away the first six glassfuls of water to flush out impurities in the water supply system.

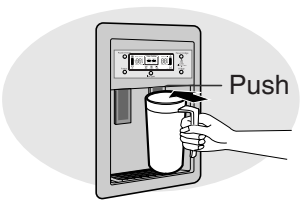

CAUTION

If you have a long vacation or business trip and won' t use the water or ice dispensers, close the water valve. Otherwise, water may occur leakage.

WARNING

Never put fingers or any other objects in the dispenser opening. It may cause injury.

SHELVES AND BINS

FREEZER

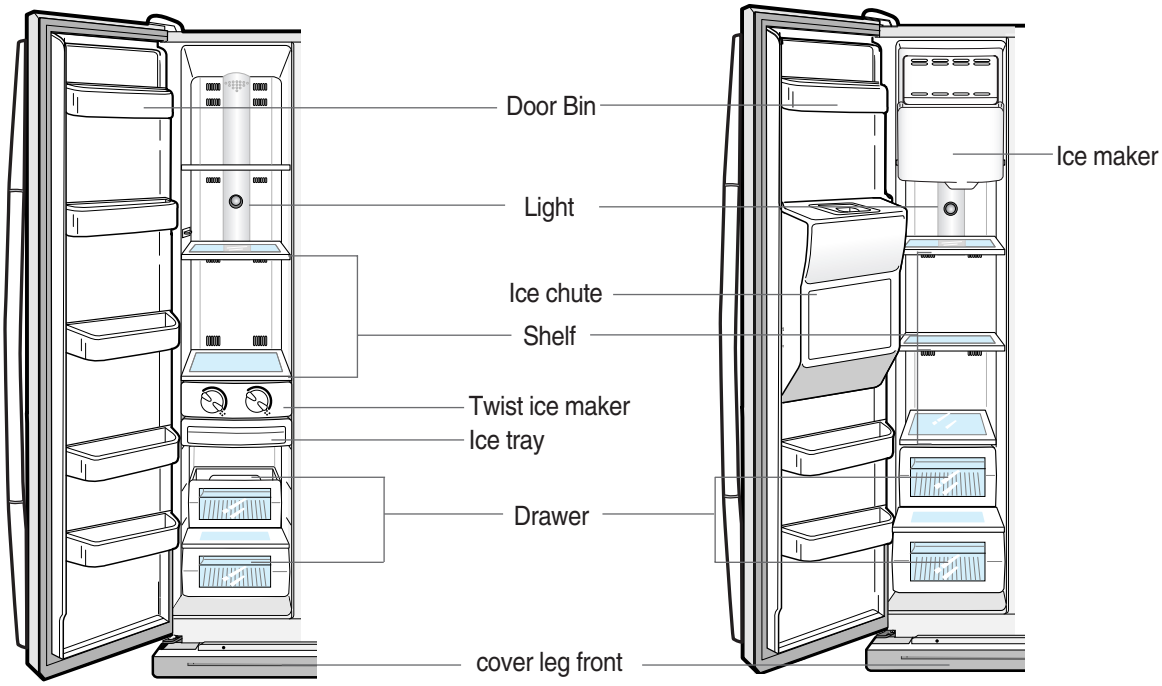

Basic model

Model with ice and water dispenser

REFRIGERATOR

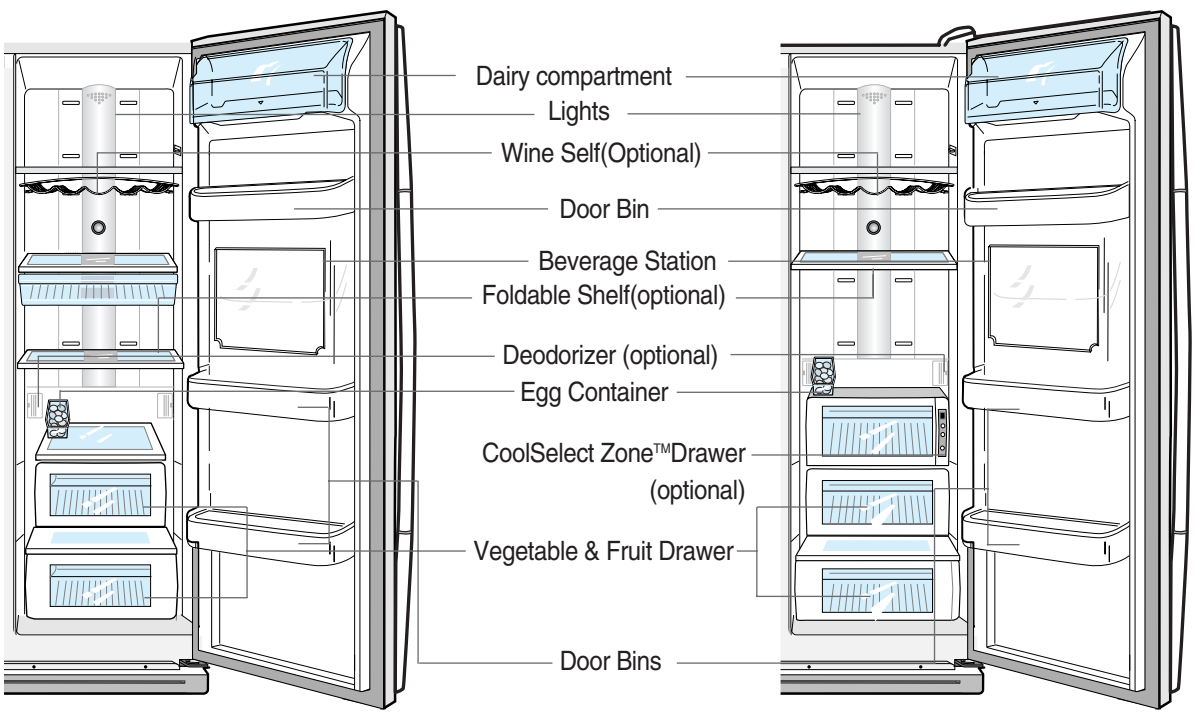

FOOD STORAGE GUIDE

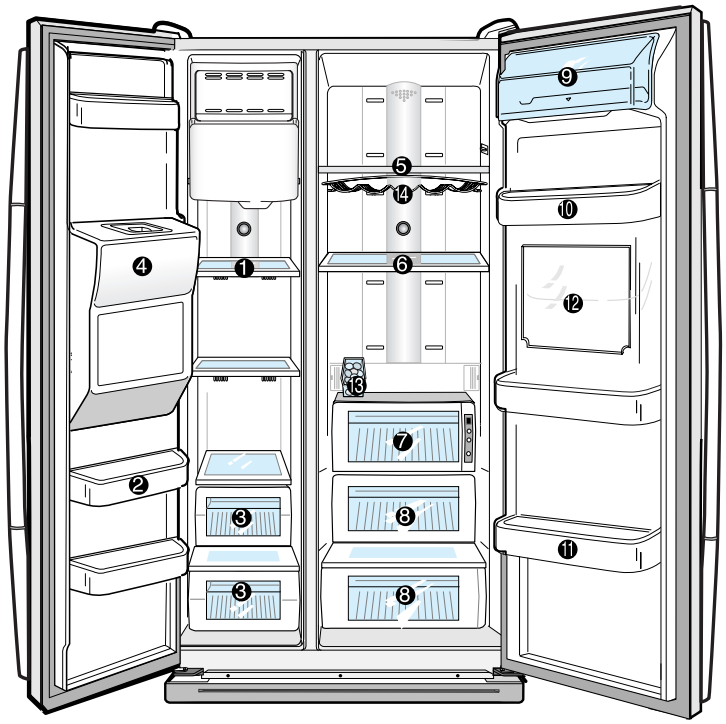

- For more space, you can store food with drawers and ice maker removed.
- Declared net volume is calculated with upper or upper/middle freezer drawer(s) removed.

FROZEN FOOD STORAGE IN FREEZER

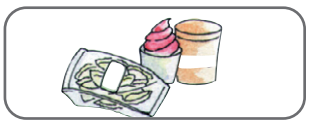

1 **Tempered Glass Shelf**
• Can be used to store all types of frozen food.

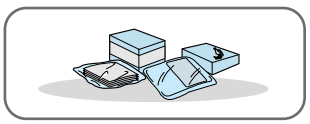

2 **Door Bin**
• Can be used for small packages of frozen food.

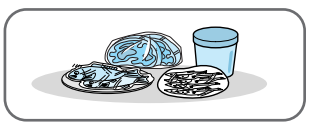

3 **Plastics Drawer**
• Can be used to store meat and dry foods. Stored food should be wrapped securely using foil or other suitable wrapping materials or containers.

4 **Ice chute (optional)**

WARNING

Do not put your fingers, hands or any other in suitable objects in the chute or ice-maker bucket. It may result in personal injury or material damage.

FOOD STORAGE GUIDE

CHILLED FOOD STORAGE IN REFRIGERATOR

5 **Tempered Spill Proof Glass Shelf**
- Can be used to store all types of chilled food.
- Safe and hard to be broken.
- Circular marks on the glass surface are a normal phenomenon.

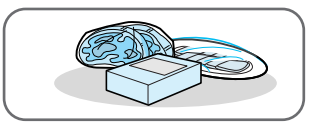

6 **Foldable shelf (optional)**
- If you need more taller space for tall items.
  Raise the front of shelf slightly and it back to make it half.
  You can use the shelf in this position to allow taller items to be stored.

7 **CoolSelect Zone™Drawer (optional)**
- Helps to preserve the taste of food and prolongs its freshness.
  Use to store cheese, meat, poultry, fish or any other foods used quickly.

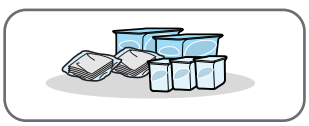

8 **Fruit & Vegetable Drawer (Upper and Lower)**
- Is used to store fruits and vegetables.
- This drawer is airtight. Optimized humidity control design helps to preserve the freshness of the stored vegetables and fruits.

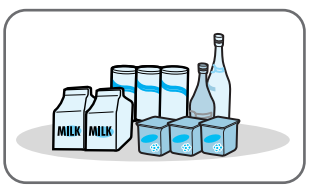

9 **Dairy Compartment**
- Can be used to store butter or margarine.

10 **11** **Door Bins**
- Can be used to store foods in small packages, such as milk and yogurt.

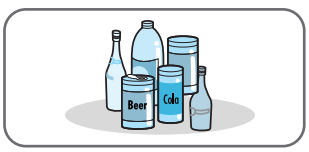

12 **Beverage Station (optional)**
- Can be used to store the frequently used items, such as canned beverages and snacks and allows access to these items without opening the refrigerator door.

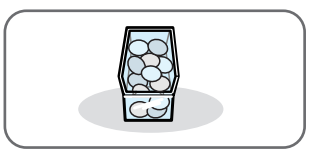

CAUTION

Bottles should be stored tightly together so that they do not fall out.

13 **Egg Container**
- Put eggs in the container and place them on the shelf.

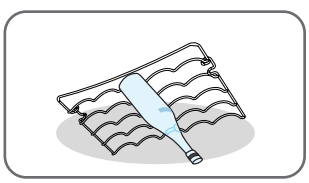

14 **Wine Shelf (optional)**
- Place your wine bottle on the shelf to maintain their taste.

WARNING

- If you have a long vacation planned, you must empty the refrigerator and turn it off. Wipe excess moisture from the inside and leave the doors open. Otherwise, odor and mold may develop.

CoolSelect Zone™Drawer GUIDE

“Select” button (Optional)

1 **Soft Freeze**

- When “Soft Freeze” is chosen, the temperature on the digtal panel displays -5°C regardless of the set temperature of the refrigerator.
- “Soft-Freeze” temperature helps keep meats and fishes fresh longer.
- Can cut meat easily without drips.

2 **Chill**

- When “Chill” is chosen, the temperature of the CoolSelect Zone™ Drawer is kept at -1°C regardless of the set refrigera tor temperature.
- “Chill” temperature helps keep meat or fish fresh longer.

3 **Cool**

- When “Cool” is chosen, the temperature will be the same as the set temperature of the refrigerator. The digital panel shows the same temperature as that of the display panel.
- The CoolSelect Zone™Drawer allows extra refrigerator space.

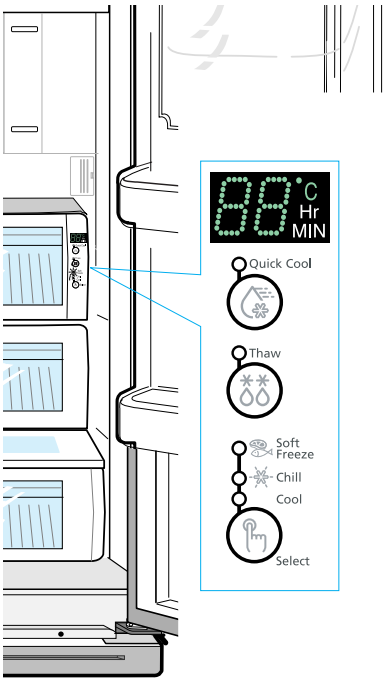

CoolSelect Zone™ Drawer GUIDE

"Quick Cool" button

- You can use the Quick Cool feature with the CoolSelect Zone™.
- "Quick Cool" allows 1~3 canned beverages to cool within 60 min.
- To cancel this option, press the "Quick Cool" button again. CoolSelect Zone™ returns to the previous temperature.
- When "Quick Cool" ends, it returns to the "Cool" temperature seting.

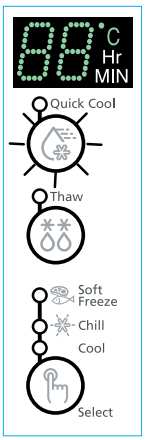

NOTE Depending on the beverages, the cool-down time may vary.

WARNING

- For "Quick Cool" option, food stored in the CoolSelect Zone™ Drawer should be removed.

"Thaw" button

- Drips loss and quality deterioration of meats reduces the freshness of foods.
- After "Thaw" is selected, warm and cold air is alternately supplied into the CoolSelect Zone™Drawer .
- Depending on the weight of meat, thawing time can be selected for 4 hrs, 6 hrs, 10 hrs, and 12 hrs sequentially.
- When "Thaw" ends, CoolSelect Zone™ display returns to "chill" condition.
- When "Thaw " ends, there are no juice in the meats and they are half-freezed condition so it is easy to cut them for cooking.
- To cancel this option, press any button except "Thaw".
- The approximate thawing time of meat and fish are shown below. (Based on 1inch thickness)

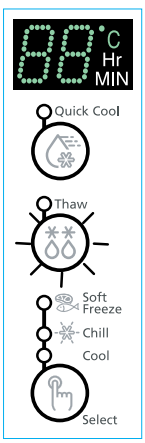

Thaw Time	4 hours	6hours	10 hours	12 hours
Weight	400 g	600 g	800 g	1000g

NOTE

Depending on the size and thickness of meat and fish, the thawing time may vary.
The above weight represents the total weight of food in the CoolSelect Zone™Drawer.
Ex) The total thawing time for 400g frozen beef and 600g frozen chicken will be 10 hours.

WARNING

- With the "Thaw" option, food stored in the CoolSelect Zone™Drawer should be removed.

REMOVING THE FREEZER ACCESSORIES

1 **Tempered glass shelf**

- Pull the shelf out as far as it goes. Then lift it up and remove it.



2 **Door bins**

- Hold the door bin in both hands and then lift it up.



3 **Drawers**

- Remove the drawer by pulling it out and lifting it up slightly.



- Press the extrusions on the left and right sides inside the cover of Dry Box and remove it by pulling forward.

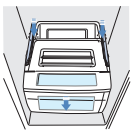

- Hold it with one hand, lift it up a little bit while pulling it forward and take it out of the refrigerator.



4 **Ice maker and tray**

- Remove the ice tray by pulling it towards you. Then remove the ice maker (basic model only).



5 **Ice maker bucket (optional)**

- Remove the bucket lifting up and pulling out.

6 **Cover Leg Front**

- Open the freezer and refrigerator doors, remove the three screws and detach the cover.
- To reassemble the leg cover, put it back into position and tighten the three screws.

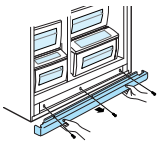

❊ Only remove the leg cover if strictly necessary.

NOTE

- Do not use excessive force when disassembling the cover; otherwise, you may cause damage.

REMOVING THE REFRIGERATOR ACCESSORIES

1 **Tempered glass shelf**

- Pull the shelf out as far as it will go. Then lift it up and remove it.

2 **Door bins**

- Hold the door bin in both hands and remove it by lifting it up.

3 **Fresh fruit & vegetable drawer and cover**

- Remove the compartment by holding the handle, pulling the compartment towards you and lifting it up slightly.
- Remove the cover by pulling it towards you.

4 **Wine shelf (optional)**

- Simpy take the shelf and pull it toward you.

Vegetable & Fruit Drawer

- Press the extrusions on the left and right sides inside the cover of Dry Box and remove it by pulling forward.

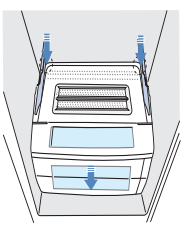

- Hold it with one hand, lift it up a little bit while pulling it forward and take it out of the refrigerator.

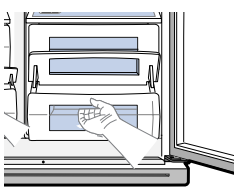

BEVERAGE STATION ™ (optional)

To access the extra refrigerating compartment, hold the compartment door handle and pull it downwards.

- The extra refrigerating compartment gives you added convenience because you do not need to open the main refrigerator door. In addition, this saves energy.

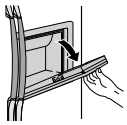

It is recommended that you use the extra refrigerating compartment for frequently used foods like beverages.

When the door is opened, it can be used as a tray to support items, such as beverage bottles and glasses.

- Do not scratch the surface of the door.

WARNING

- Before removing the freezer and refrigerator accessories, please move the stored foods to other space.
- The door of the Beverage Station should never be removed.
  The Beverage Station™ cannot function if its door is missing.
- When you close the door of beverage station, be careful not to put your hands or fingers in a position where those can be caught or injured.
- If you use the opened door as a tray do not place heavy objects on it.
- Do not allow children to hang on the door, because there is a risk of personal injury or material damage.

CLEANING THE ACCESSORIES

Inside

- Clean the accessories using a mild detergent. Then wipe with a dry cloth.
- After washing the accessories, make sure that they are dry before using them again.

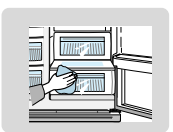

Exterior

- Wipe the front control panel with a clean cloth.
- The doors and door handles should be cleaned with a mild detergent and cloth. Dry them with a clean cloth.
- The exterior should be polished once or twice a year.

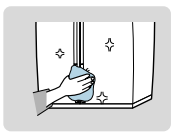

Rear

- Use a vacuum cleaner to remove dust once or twice a year.

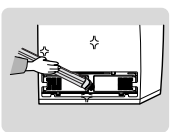

Ice and water dispenser and drainage grid (optional)

- Use a damp cloth to clean the ice and water dispenser. Then wipe it with a dry cloth.
- Keep the ice and water dispenser and drainage grid dry.

Beverage station (optional)

- Use a damp cloth to clean the extra refrigerating compartment. Then wipe it with a dry cloth.

Rubber door seals

- If the rubber door seals are dirty, the door will not close properly and the refrigerator and freezer will be unable to function efficiently. Clean them with a mild detergent and damp cloth. Then wipe them with a dry cloth.

NOTE

- When cleaning the appliance or if you are not going to use it for a long time, remove the power plug, leave the doors open and keep the appliance dry.
- Do not clean it by spraying it directly with water.
- Do not clean it with benzene, thinner or car detergent.

CLEANING THE ACCESSORIES

Deodorizer (optional)

- Remove the cover with a flat blade screw driver as shown.
- Take out the cartridge from the cover and soak it in clean, warm water for at least 4 hrs. Completely dry out the cartridge with sunlight for at least 8 hrs in an open area.
- Repeat this process once or twice a year.

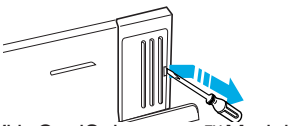

With CoolSelect zone™ Model

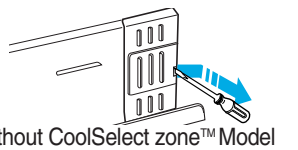

Without CoolSelect zone™ Model

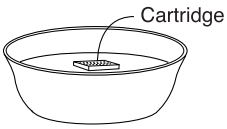

NOTE

- If it is dried in a confined area, odor may be spread to that area.
- Keep the children away from yellow water, they may drink water.

CHANGING THE INTERIOR LIGHT

WARNING

Before changing the interior light, unplug the appliance from the power supply. If you experience difficulty when changing the light, contact your service centre.

INTERIOR LIGHT IN THE FREEZER (BASIC MODEL ONLY) / REFRIGERATOR

1 Place a flat screwdriver under the light cover hooks and push in the direction of the arrow.

2 Pull the cover in the direction of the arrow.

3 After changing the bulb, replace the light cover.

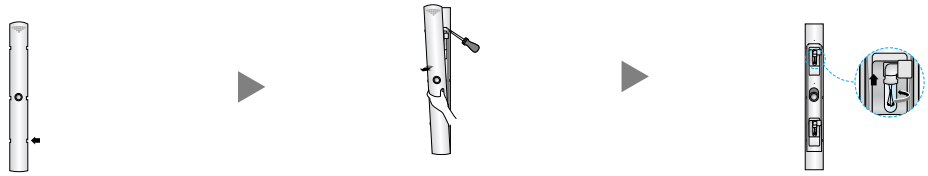

INTERIOR LIGHT IN THE FREEZER (MODEL WITH ICE AND WATER DISPENSER)

1 Lift and pull out the ice maker cover (①).

2 Use a screwdriver to remove the light cover (②).

3 Replace the bulb with a new one (③), and then secure the light cover back into place using a screwdriver.

4 Replace the ice maker cover.

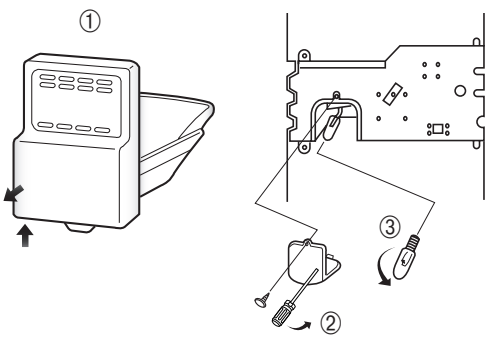

WATER FILTER

The water "Filter Indicator" light

• "Filter Indicator" light lets you know when it is time to change your water filter cartridge. This tells you that it is almost time to change the current cartridge.
It is recommended that you should hold button for 3 seconds after replaced the cartridge.
(see "Install the water filter" section on page 29 for more information)

• If you install a new water filter, throw away the first six glassfuls of water, or until water flows clearly.

Using the dispenser without the water filter

• You can not use the water and ice dispenser without a water filter cartridge as the water line may become blocked.

Ordering replacement filters

• To order more water filter cartridges, call 1-800-SAMSUNG and ask for accessory Part # DA29-00003B or contact your authorized Samsung dealer.

DOORS

The refrigerator doors have a special door opening and closing feature to make sure that the doors close all the way and are securely sealed.

When opening the door, it will only open so far. After reaching a certain point, it will remain open.

When the door is partially open, it will close automatically .

INSTALLATION OF THE REFRIGERATOR

Checking the Dimensions of your Entrance Door

NOTE

- Check the dimensions of your entrance door to determine whether the refrigerator can pass through it.
- Moving refrigerator through door if depth or width of refrigerator is bigger than door's, removes refrigerator doors.

Selecting the Location for the Refrigerator

- Select a location with easy access to the water supply.
- Select a location with enough space for the refrigerator.
- Select a location without direct exposure to sunlight.

CAUTION

- Before disassembling the freezer door, the water supply line needs to be disconnected. (If not, the water supply line can be damaged.)
- See "Separating the water supply line from the refrigerator" on the next page.

Allow sufficient space to install the refrigerator on a flat surface.

- If your refrigerator is not level, the internal cooling system may not work correctly.

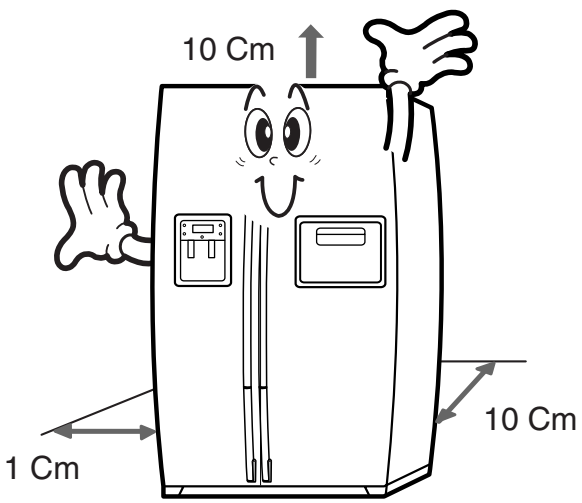

NOTE

When you install the refrigerator, it is recommended that the clearance be maintained as much as specified above.
If the space is not allowed, maintain at least 5cm clearance to the back wall.

REMOVING THE FRONT LEG COVER

Removing the Front Leg Cover (Optional)

Open the freezer and refrigerator doors, and then take off the front leg cover assembly by turning the three screws counter-clockwise.

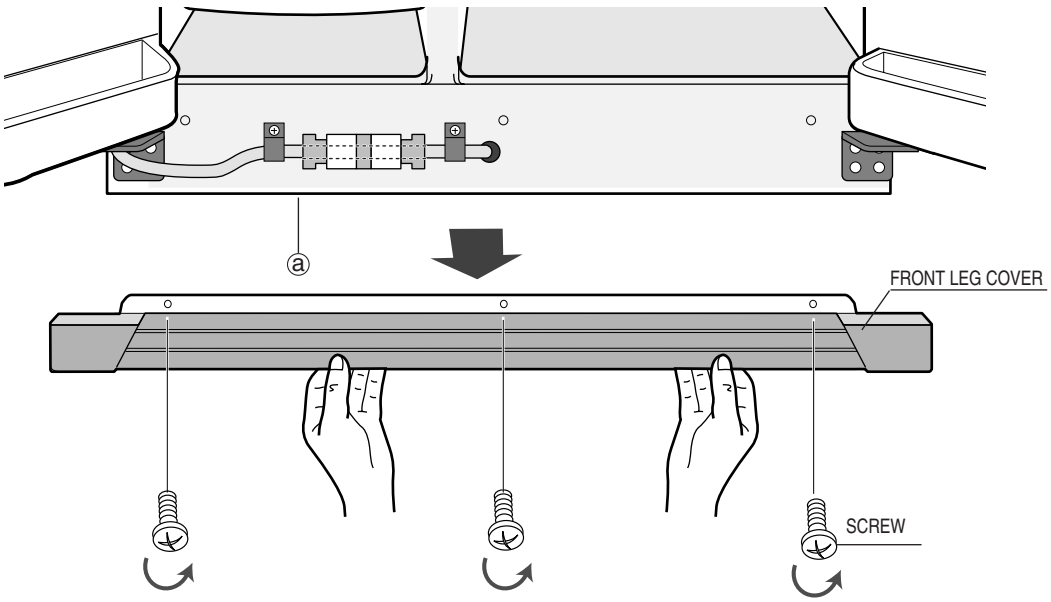

Separating the water supply line from the refrigerator (Optional)

1) Remove the screw from clamp (ⓐ).
2) Remove the water tube by pressing the coupler (②) and pulling the water tube (①) away.

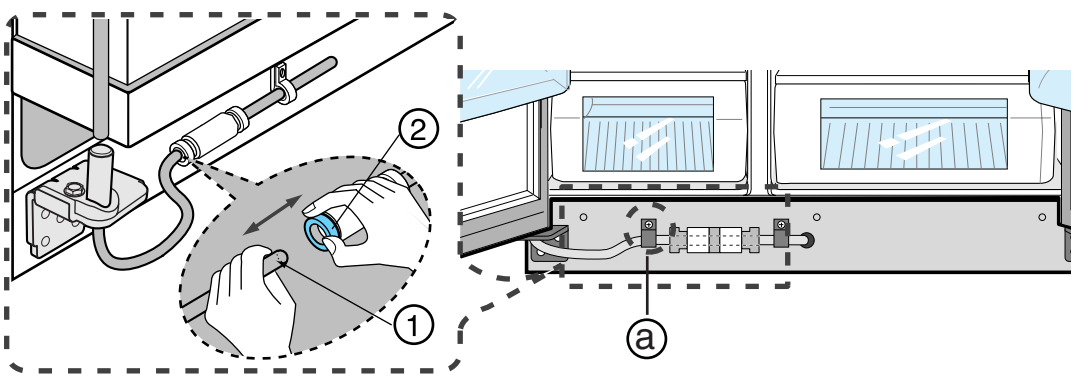

WARNING

Do not cut the water tube but separate it from the coupler.

REMOVING THE REFRIGERATOR DOORS

NOTE

- Lift the door straight up.
- Be careful not to pinch the water tubing and wire harness on the door.
- Place doors on a protected surface.

Removing the Freezer Door

1) With the door closed, remove the upper hinge cover (①) using a screwdriver, and then disconnect the wires (②).

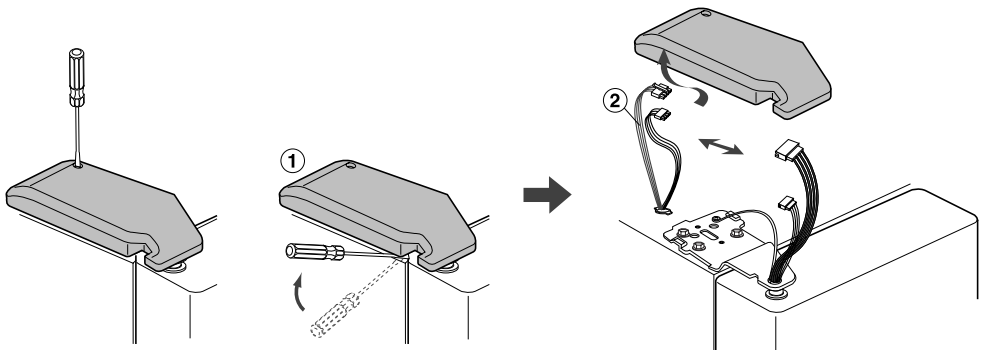

2) Remove hinge screws (③) and ground screw (④) counter-clockwise, and take off the upper hinge (⑤) along the arrow (⑥). Take care when removing the door to ensure that it does not fall on you.

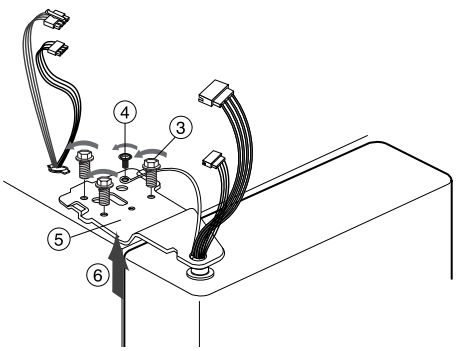

3) Remove the door from the lower hinge (⑦) by carefully lifting the door (⑧).

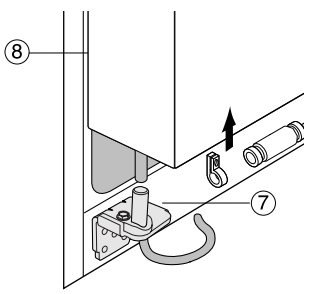

4) Remove the lower hinge (⑨) using a screwdriver.

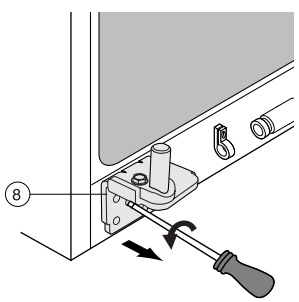

REMOVING THE REFRIGERATOR DOORS

Removing the Refrigerator Door

1) With the door closed, remove the upper hinge cover (①) using a screwdriver, and then discon-nect the wires (②).

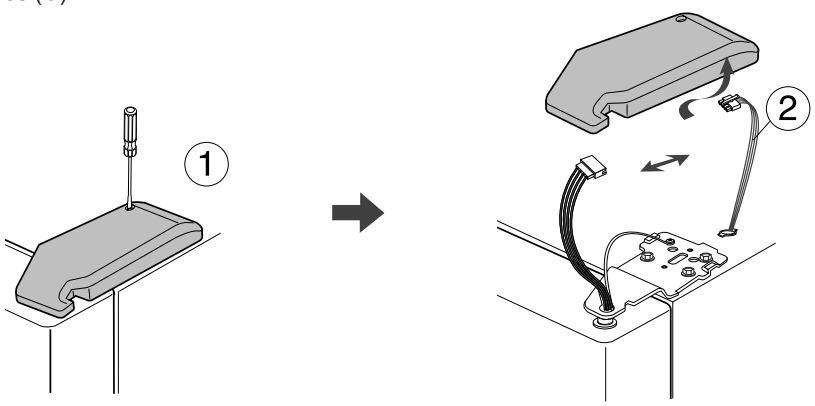

2) Remove hinge screws (③) and ground screw (④) counter-clockwise, and take off the upper hinge (⑤) in the direction of the arrow (⑥). Take care when removing the door to ensure that it does not fall on you.

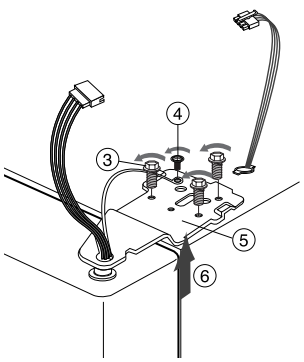

3) Remove the door from the lower hinge (⑦) by lifting the door (⑧).

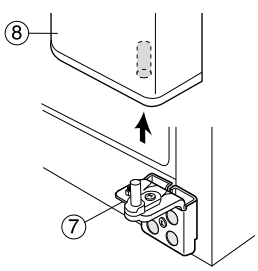

4) Remove the lower hinge (⑨) from the bracket lower hinge (⑩) by lifting the lower hinge (⑨) in the direction of the arrow.

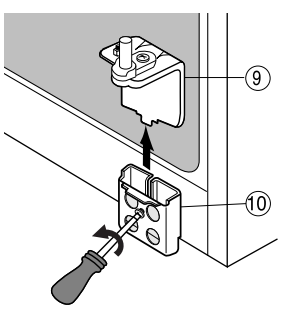

NOTE

• After disassembling the freezer / refrigerator door, move it to the appropriate location. you must reassemble it.

REATTACHING THE REFRIGERATOR DOORS

Reattaching the Freezer Door

1) Reattach the lower hinge (①) using screwdriver.

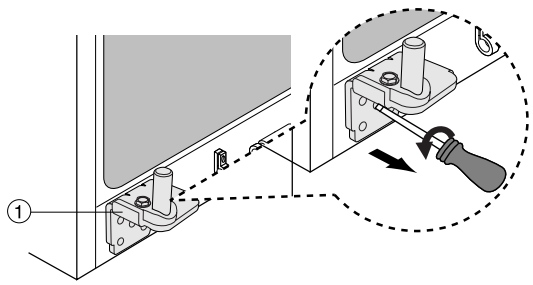

2) Reattach the freezer door by inserting the hose (②) in the lower side of the door into the hole in the lower hinge (③) and pulling the hose down.

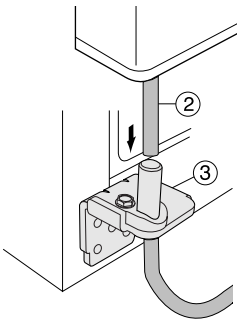

3) Insert the upper hinge shaft (④) into the hole (⑤). After levelling the upper hinge hole (⑥) with the hole of the cabinet (⑦). Fasten bolts (⑧) and screw (⑨) in a clockwise direction.

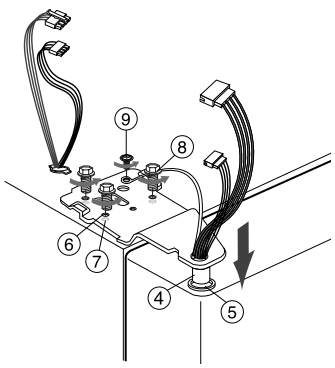

4) Connect the wires.

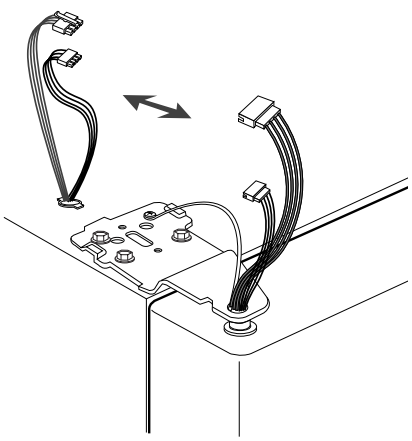

5) Put the front part of the upper hinge cover (⑩) on the front part of the upper hinge (⑪) and reattach from the front part of the upper hinge cover first.

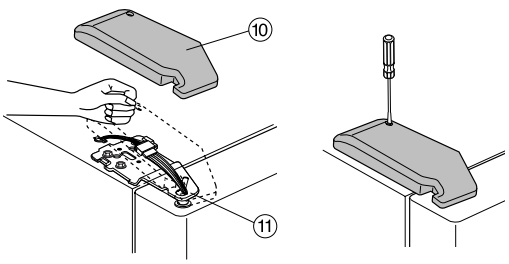

REATTACHING THE REFRIGERATOR DOORS

Reattaching the Refrigerator Door

1) Insert the lower hinge (①) in the bracket lower hinge (②).

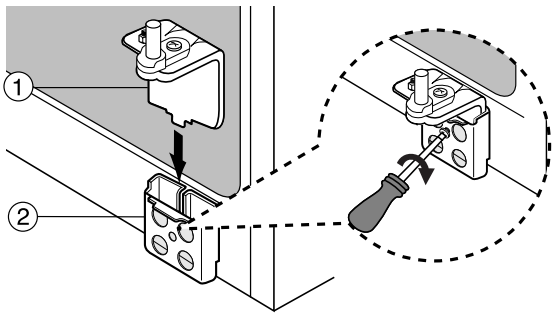

2) Place the hole in the refrigerator door (③) over the lower hinge (④).

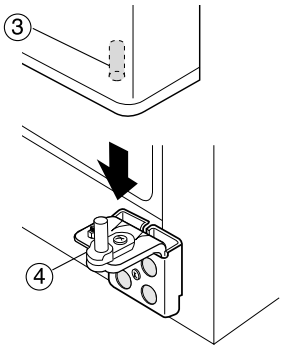

3) Insert the upper hinge shaft (⑤) into the hole (⑥). After levelling the upper hinge hole (⑦) with the hole of the cabinet (⑧). Fasten hinge screws (⑨) and screw (⑩) in the clockwise direc-tion.

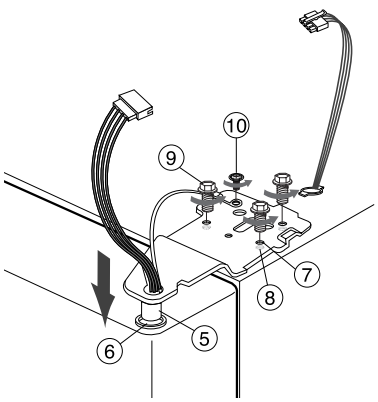

4) Connect the wires.

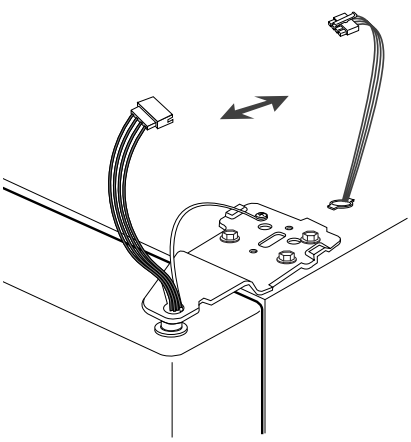

5) Put the front part of the upper hinge cover (⑪) on the front part of the upper hinge (⑫) and reattach it from the front part of the upper hinge cover first.

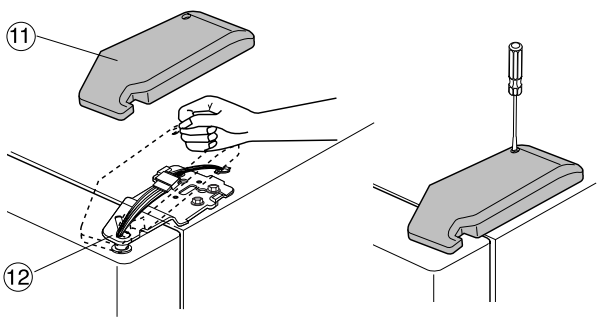

REATTACHING THE REFRIGERATOR DOORS

Reattaching the Water Tube (Optional)

1) While pressing the front face of coupler (②), insert the water line (①) in the coupler.
2) Tighten the screw on the clamp (ⓐ).

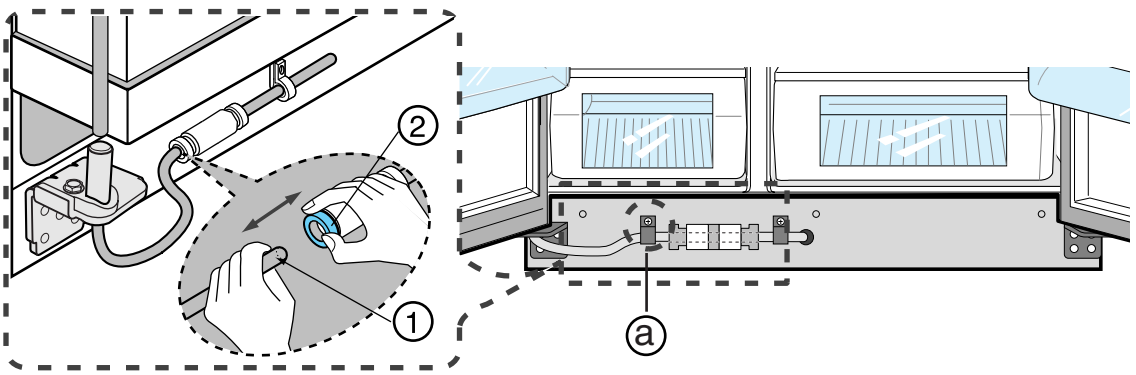

Reattaching the Front Leg Cover (Optional)

Put on the front leg cover by turning the three screws clockwise, as shown in the figure.

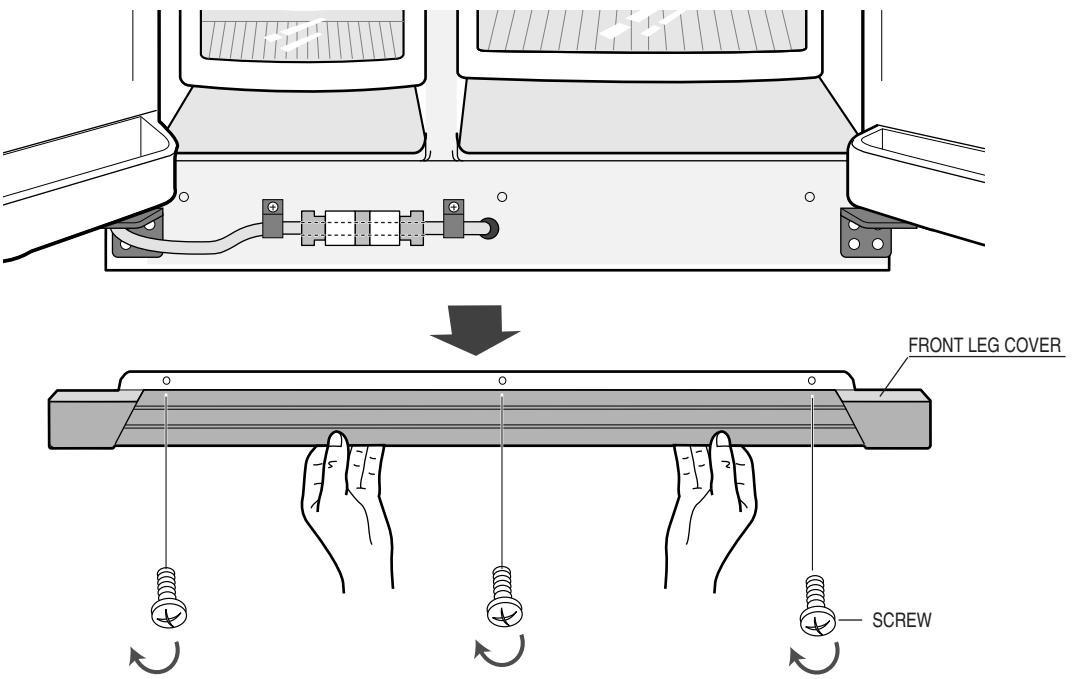

ADJUSTING THE CLEARANCE BETWEEN THE DOORS

Please level the refrigerator first.

The doors will be uneven if the refrigerator is not level.

Case 1) Freezer door is lower than that of the refrigerator

Insert a straight screwdriver (-) (①) into a slot of the control lever (②), turn it clockwise and level the refrigerator.

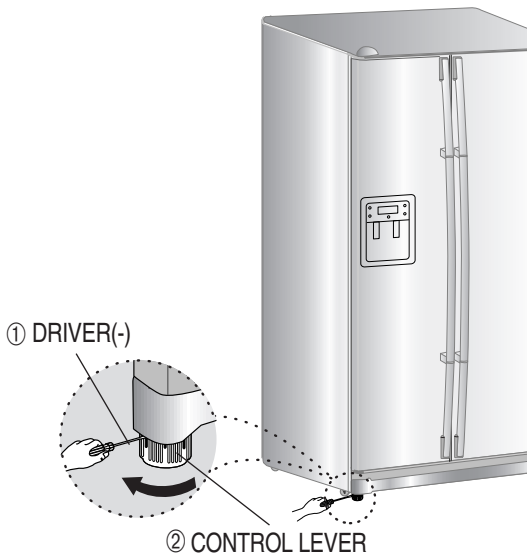

Case 2) Freezer door is higher than that of the refrigerator

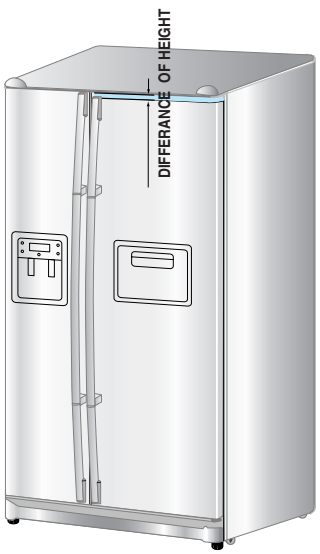

Insert a straight screwdriver (-) (①) into a slot of the control lever (②), turn it clockwise and level the refrigerator.

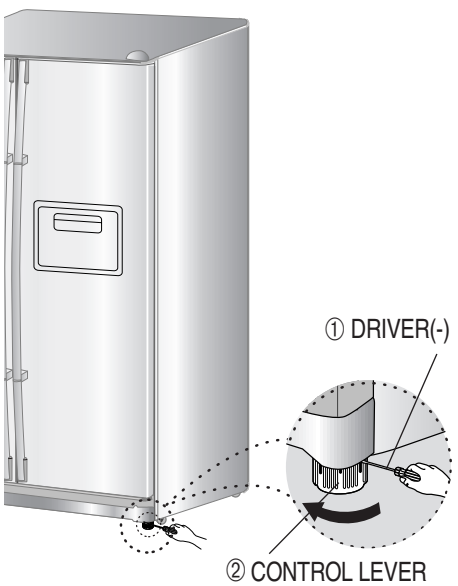

NOTE

Do not make small adjustment by turning the control lever, Please refer to the next page.

ADJUST THE CLEARANCE BETWEEN THE DOORS

Making small adjustments between doors.

If the door of freezer is higher than that of the refrigerator.

Please open the doors and adjust the doors as follows:

Warning) When it comes to the caps, they are just for the packing.
So, throw them away after adjusting the heights the fridge doors.

1) Release the nut (①) on the lower hinge until the upper end of the bolt (②).

NOTE

First of all, remove the caps (④) on the bolts at the fridge doors. When you release the nut(①), use enclosed hex wrench (③) to turn the bolt(②) a little counter clockwise to make the nut(①) loose with your fingers.

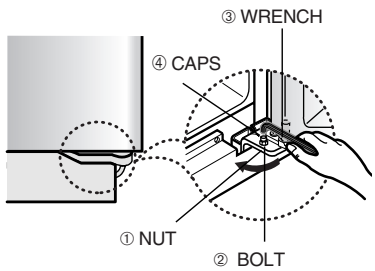

2) Please adjust the height difference between the doors turning the bolt (②) turn clockwise( ) or counter clockwise ( ).

NOTE

When you turn clockwise ( ), the door goes up.

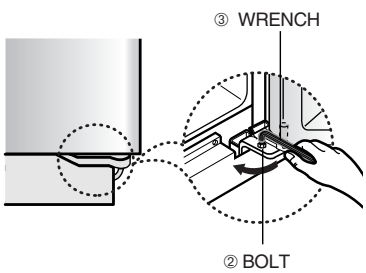

3) After adjusting the doors, turn the nut (①) turn clockwise ( ) until the lower end of the bolt, then tighten the bolt again with the wrench (③) to fix the nut(①).

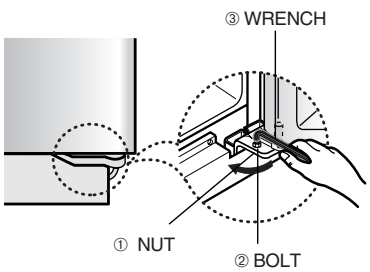

NOTE

If you do not fix the nut (①) firmly, the bolt (②) may be released.

CHECKING THE WATER DISPENSER LINE (OPTIONAL)

1) In order to operate the ice maker properly, water pressure of 1.4 ~ 10 kgf/cm^2 is required.
   In this range a 100 cc paper cup can be filled in 10 seconds.

2) The water filter removes particles. It does not sterilize or destroy any micro-organisms.

3) If the refrigerator is installed in an area with low water pressure (below 1.4kgf/cm^2), you should install a booster pump to compensate for the low pressure.

4) Ensure the water storage tank inside the refrigerator is properly filled initially. Push the water dis penser lever until the water runs from the outlet.

NOTE

A universal water supply kit is available at extra cost from your dealer. The refrigerator manufacturer recommends using a water supply kit containing copper tubing.

Checking the Parts

Purifier



Sealing tape

Tapping screw x 12EA

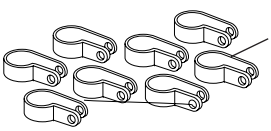

Clip A x 8EA

INSTALLING OF THE WATER DISPENSER LINE

For Interior Model (Case 1)

Connecting to water supply line

- Shut off the main water supply line and turn the Ice maker to the off position.
- Locate the nearest cold drinking water line.
- Follow the instructions in the ice maker installation kit.

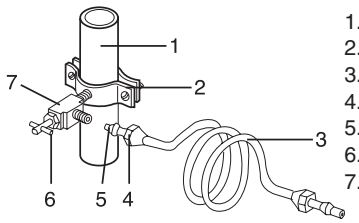

1. Cold Water line
2. Pipe Clamp.
3.Copper (or Plastic) line
4.Compression Nut
5.Compression Sleeve
6.Shut Off Valve
7.Packing Nut.

Connect the water line to the refrigerator

- Slip the compression nut and plastic ferrule through the plastic tube.
- After inserting the sleeve, tighten the compression nut onto 1/4" compression fitting(union).

NOTE Do not overtighten the compression nut.

- Slip the compression ferrule and nut on copper(or plastic) tubing as shown.
  Tighten the comperssion nut onto the compression fitting(union).
- Turn water on and check for any leakege.

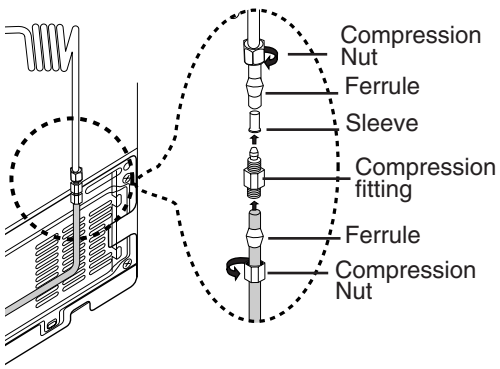

NOTE Waterline must be connected to drinkable water only

(Case 2)

Check the water supply line

Connect the water pipe with coupler and tap.
- Close the main water tap.
- Connect coupler "A" to the tap.
- Every join should be protected with sealing tape.

WARRANTY INFORMATION
This water line installation is not covered by the refrigerator or ice maker manufacturer's warranty.
Follow these instructions carefully to minimise the risk of expensive water damage.

Note:
If the coupler does not fit on the current tap, go the nearest authorised service dealer and purchase the right couplers fittings.

CAUTION
The water line must be connect-ed to the cold water pipe. If it is connected to the hot water pipe, it may cause the purifier to malfunction.

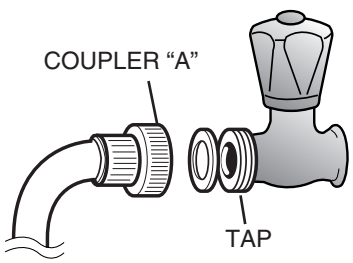

INSTALLING THE WATER DISPENSER LINE

Connect the water line to the refrigerator.

- Remove the compressor cover of the refrigerator.
- Connect the water line to the valve, as shown in the figure.
- When connected, check if there is any leakage.
  If any, repeat the connection.
- Reattach the compressor cover of the refrigerator.

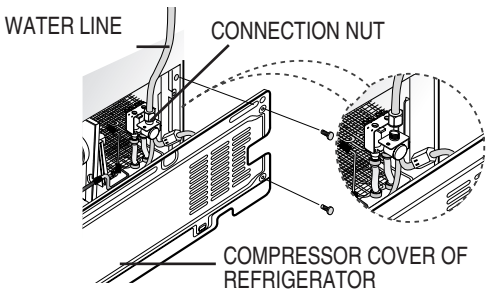

Secure the water line.

- Using clip ”A”, fix the water line to the wall (the back of refrigerator).
- When the water line is secure, make sure whether the
  water line is not excessively bent, pinched or squashed.
  Complete the installation of the water supply line.
- Power on the refrigerator and press the lever on the right of the
  dispenser until water runs out through the water line and all air has been empty.
- At this time, check for any possible leakages at the join point in the water line.
  After securing the water line, move the refrigerator to the required location.
  Once the refrigerator is in position, do not move possibly.

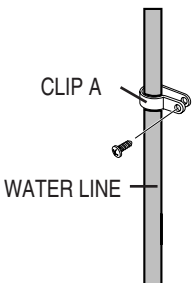

Install the water filter.

- As shown, separate the sticker in the refrigerator.
  Remove the water filter from the box and put a month indicator
  sticker on the filter as shown.
- Write the month you installed the filter on the label.
  EX) If the water filter was installed in March, put “MAR”
- Remove the protective cap then position and insert the filter as shown,
- Slowly turn the water filter clockwise 90º to align the indication mark on the
  cover, locking the filter in postion. Do not overtighten.

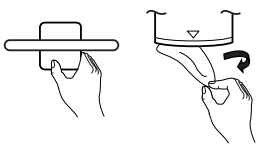

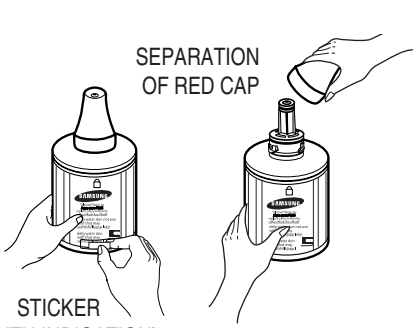

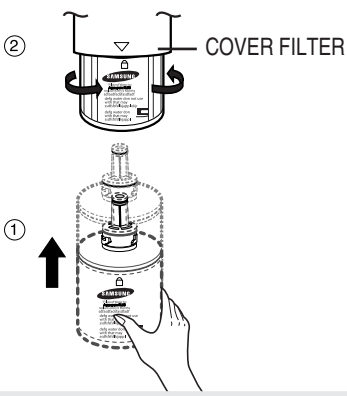

CAUTION Please check if the indication line aligns with the lock position.

INSTALLING THE WATER DISPENSER LINE

Remove any residual matter inside the water supply line

1) Turn on the main water supply & shut-off valve of the water supply line.
2) Run water through the dispenser until the water runs clear (6~7 minutes). This will clean the water supply system and clear air from the lines.
3) Additional flushing may be required in some households.
4) Open the refrigerator door and check if water leaks around the water filter.

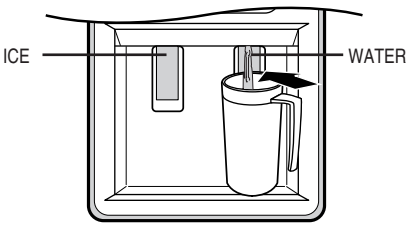

NOTE

- A newly-installed water filter cartridge may cause water to briefly spurt from the dispenser.
- Before reinstalling the water filter, remove the wine shelf.

Check the amount of water supplied to the ice tray.

1) Lift up (①) and pull out (②) the ice maker bucket in the freezer.

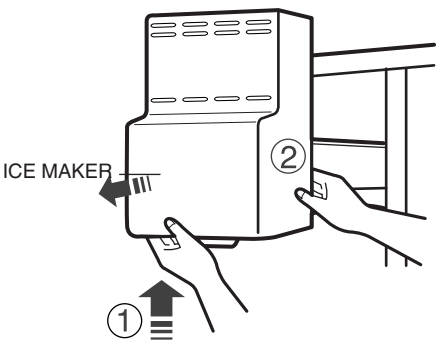

2) When you press the test button, the ice cube container is filled with water from the water supply tap.
Check the amount of water (see the illustration below).
If the water level is too low,
the ice cubes will be small.
This is not a problem with the ice maker but of the water pressure in the pipe, and occurs frequently.
When this problem occurs, contact the dealer service center to check the amount of water supplied.

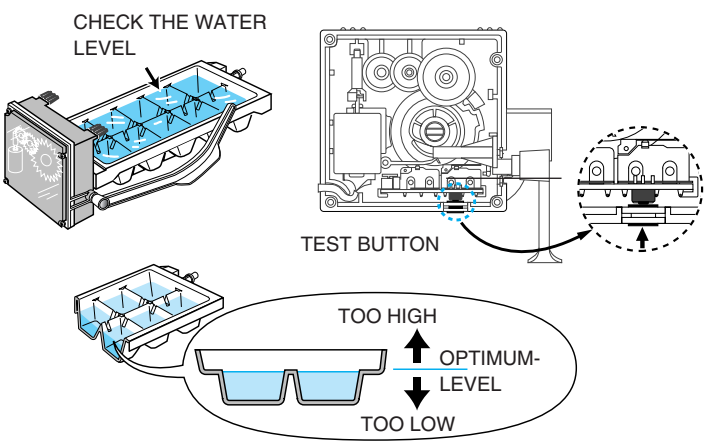

TROUBLESHOOTING

The refrigerator does not work at all or it does not chill sufficiently

- Check that the power plug is properly connected.
- Is the temperature control on the display panel set to the correct temperature? Try seting it to a lower temperature.
- Is the refrigerator in direct sunlight or located near a heat source?
- Is the back of the refrigerator too close to the wall?

The food in the refrigerator is frozen

- Is the temperature control on the display panel set to the correct temperature? Try seting it to a warmer temperature.
- Is the temperature in the room too low?
- Did you store the food with a high water content in the coldest part of the refrigerator.

You can hear unusual noise or sounds

- Check that the floor is levelled and stable.
- Is the back of the refrigerator too near to the wall?
- Was anything dropped behind or under the refrigerator?
- A “ticking” sound may be heard from inside the refrigerator, but this is normal. This occurs because various accessories are contracted or expanded.

The front corners and sides of the cabinet are hot; condensation occurs.

- Anti-condensators are installed in the front corners of the refrigerator to prevent condensation.
- Condensation can occur when you leave the door open for a long time.

Ice is not dispensed

- Did you stop the ice making function?
- Is there any ice in the ice storage unit?
- Is the water line connected and the shut-off valve open?
- Is the freezer temperature too warm? (Set the temperature lower)
- Did you wait for 12 hours after installation of the water supply line before making ice?

You can hear water bubbling in the refrigerator

- The bubbling comes from the refrigerant circulating in the refrigerator and is normal.

There is a bad smell in the refrigerator

- Wrap food with a strong smell so that it is airtight. Throw away any rotten food.

Frost forms on the wall of the freezer

- Is the air vent blocked?
- Allow sufficient space between the foods stored for efficient air circulation.
- Is the door closed properly?

No water is supplied

- Is the water line connected and the shut-off valve open?
- Is the water supply line crushed?
- Is the water tank frozen because the refrigerator temperature is too low? Select a warmer setting on the display panel.

Ambient Room Temperature Limits

This fridge/freezer is designed to operate in ambient temperatures specified by its temperature class marked on the rating plate.

Temperature Class	Symbol	Ambient Temperature	
		Maximum	Minimum
Extended Temperate	SN	32°C (90°F)	10°C (50°F)
Temperate	N	32°C (90°F)	16°C (61°F)
Subtropical	ST	38°C (100°F)	18°C (64°F)
Tropical	T	43°C (109°F)	18°C (64°F)

NOTE: Internal temperatures may be affected by such factors as the location of the fridge/freezer, ambient temperature and the frequency with which you open the door. Adjust the temperature as required to compensate for these factors.

SAMSUNG